


BLACK DRAGON BURNER

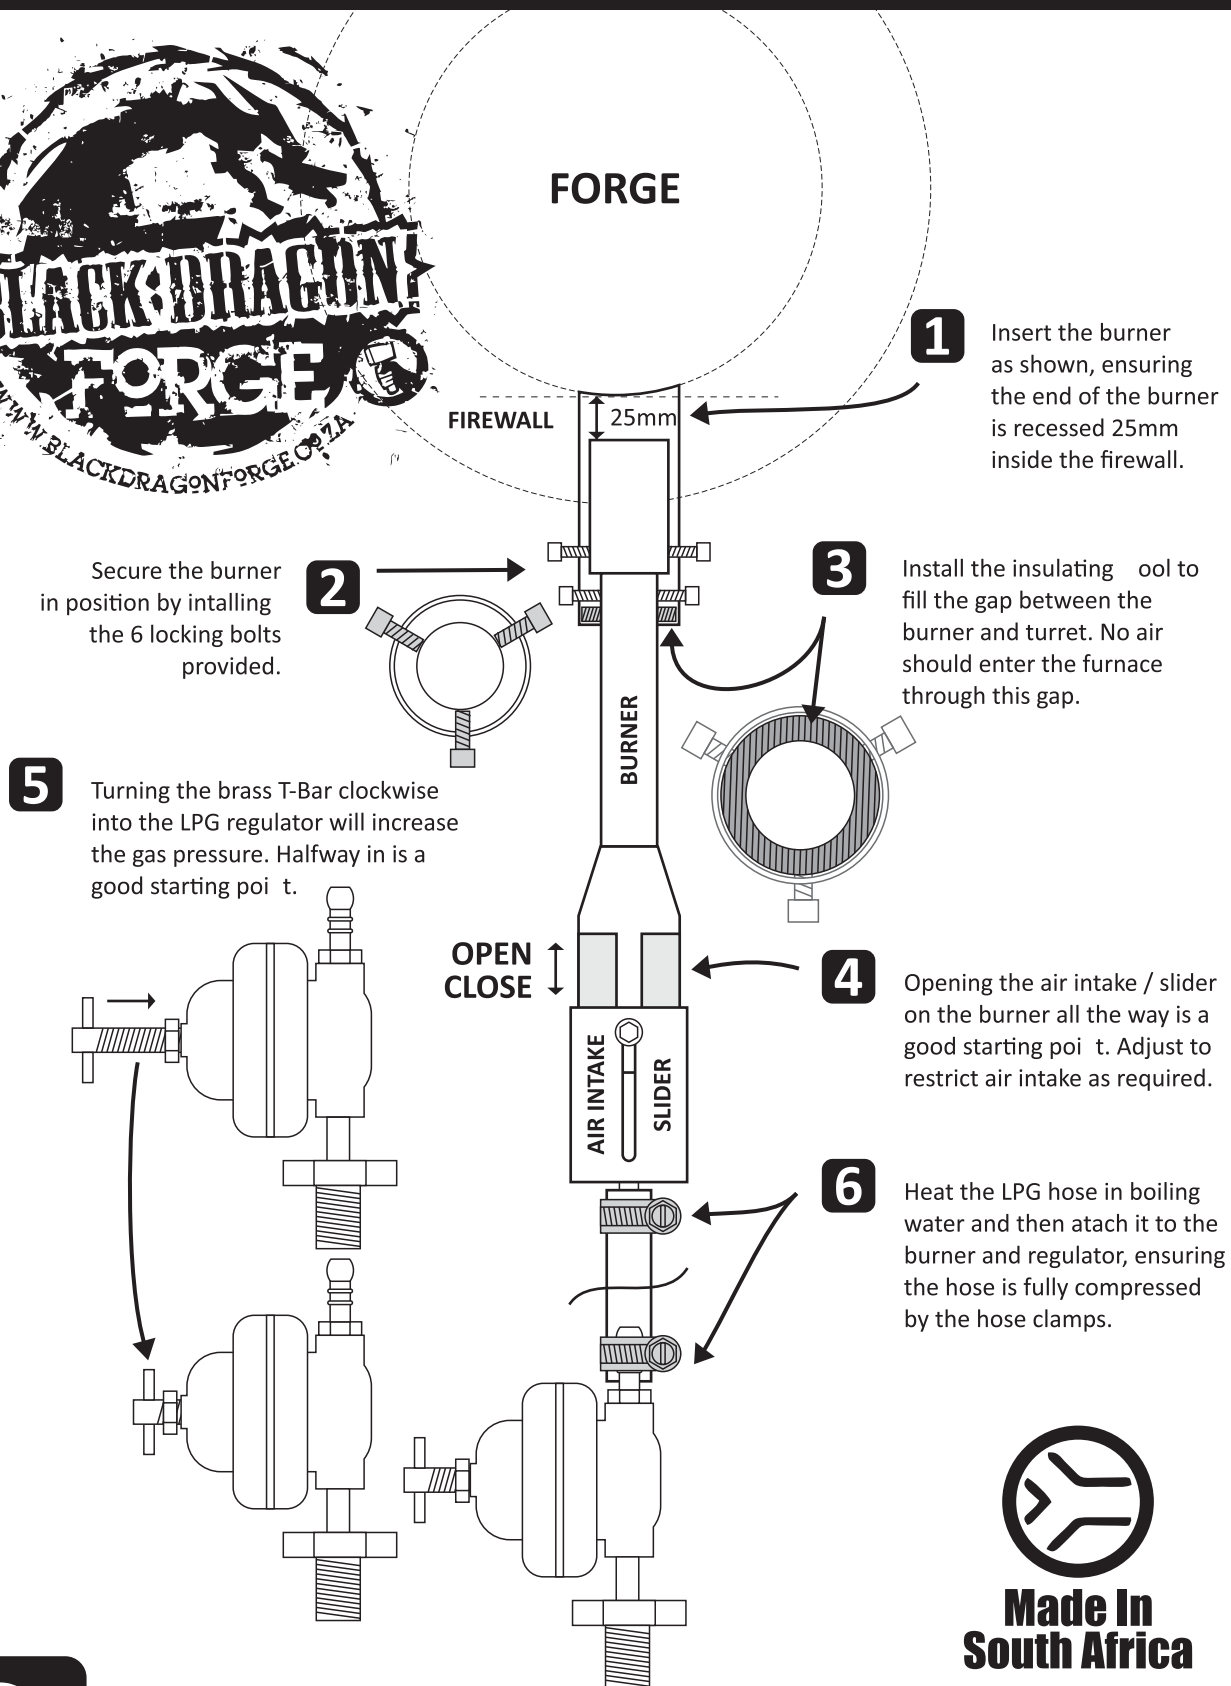

1 Insert the burner as shown, ensuring the end of the burner is recessed 25mm inside the firewall.

2 Secure the burner in position by installing the 6 locking bolts provided.

3 Install the insulating wool to fill the gap between the burner and turret. No air should enter the furnace through this gap.

5 Turning the brass T-Bar clockwise into the LPG regulator will increase the gas pressure. Halfway in is a good starting point.

4 Opening the air intake / slider on the burner all the way is a good starting point. Adjust to restrict air intake as required.

6 Heat the LPG hose in boiling water and then attach it to the burner and regulator, ensuring the hose is fully compressed by the hose clamps.



Made In South Africa



SUPPORT: NEELS +27(0)83 451 3105 / SHAWN +27(0)82 318 5900

WWW.BLACKDRAGONFORGE.COM